

How to extract karaoke songs from CD+G disc

This instruction explains how to extract karaoke songs from CD+Graphics (CD+G) discs using Encoder MCG program of CAVS. The result of extraction will be a pair of files, *.mcg and *.mp3, for each song of the CD+G disc. The *.mcg file will contain the graphic data and the *.mp3 file will contain the audio data.

From the files *.mcg and *.mp3, you can make a CD+G disc, Super CD+G disc, or USB memory device compatible to CAVS DVD Karaoke players:


- For the instruction on how to make a CD+G disc, see ([PDF](#)).
- For the instruction on how to make a Super CD+G disc, see ([PDF](#)).
- For the instruction on how to prepare a USB memory device, see ([PDF](#)).

REQUIREMENT:


- **CD+Graphics (CD+G) discs.**
- **CAVS Encoder MCG** program (purchase online for download at www.cavsusa.com/playcdg_home/encoder_mcg.htm).
- **CD+G compatible disc writer**
 - Plextor CDR PlexWriter 52/32/52, PlexWriter 48/24/48
 - Plextor DVDR PX 708, 712, 716, 760 (excluding SA models)
 - Contact CAVS Tech Support at techsupport@cavsusa.net for the latest list of CD+G compatible disc writers.

STEP BY STEP INSTRUCTION


Step 1. Open your Encoder MCG program and click on "Source Drive"

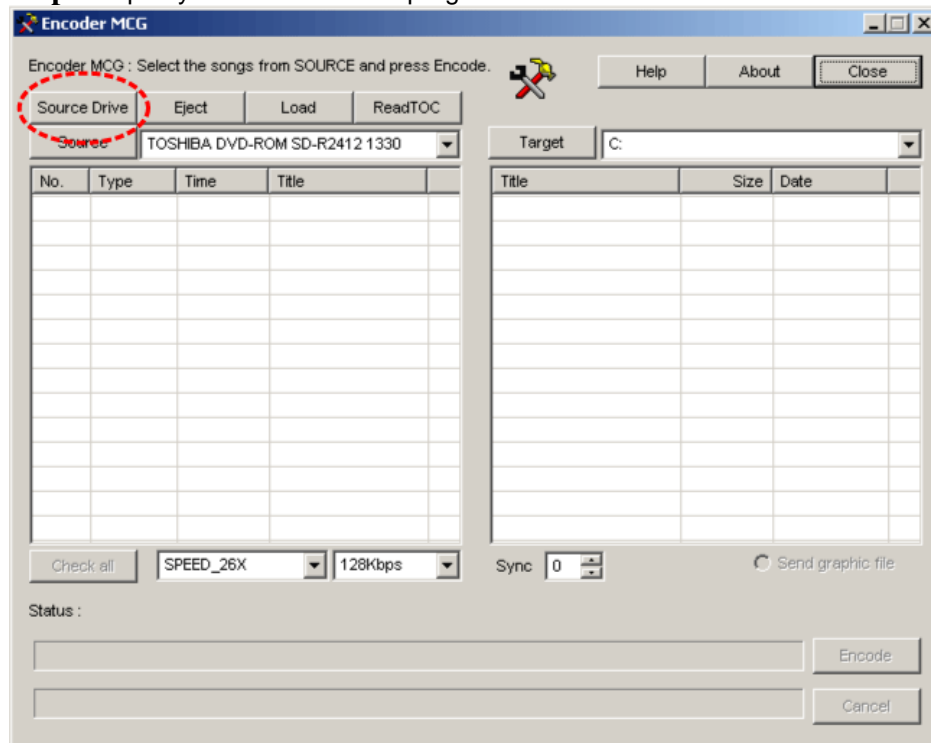


Step 2. Select the source drive in which a CD+G disc is inserted. And click OK.

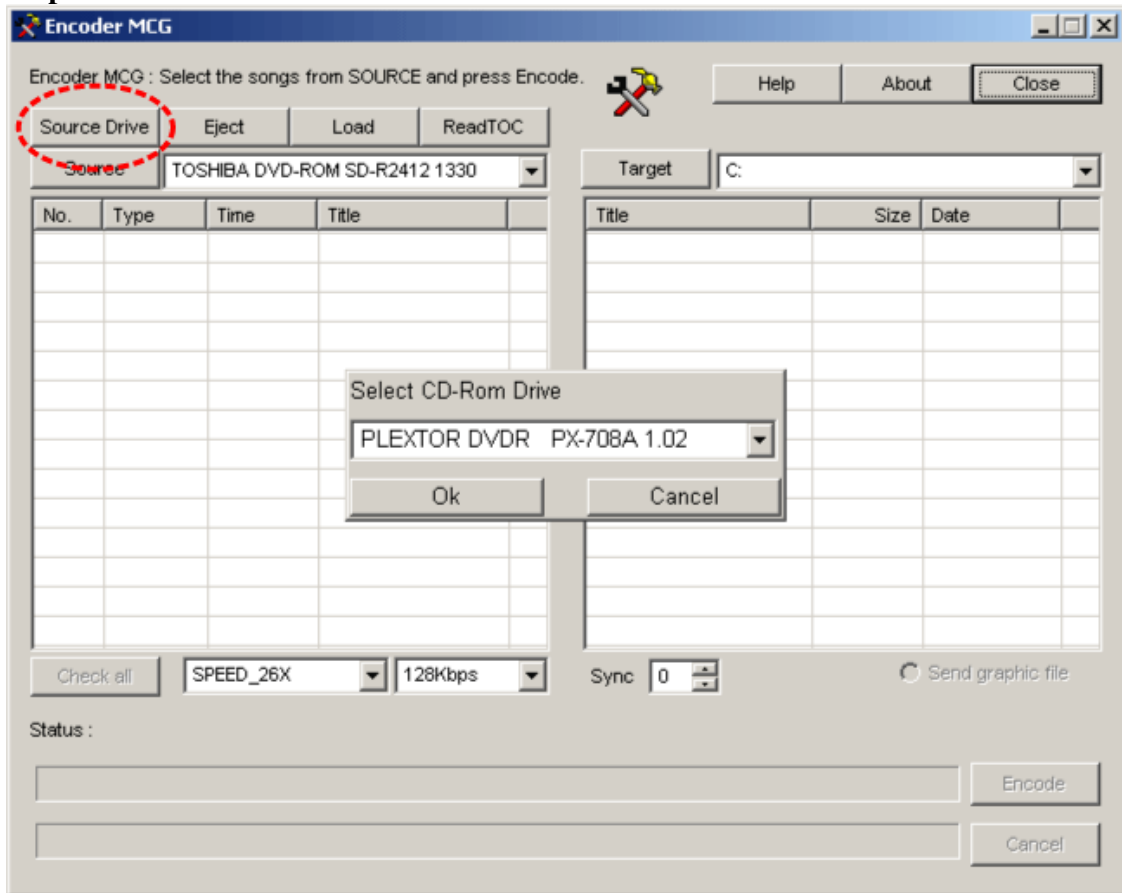


Step 3. The song list in the disc will be listed as shown below.

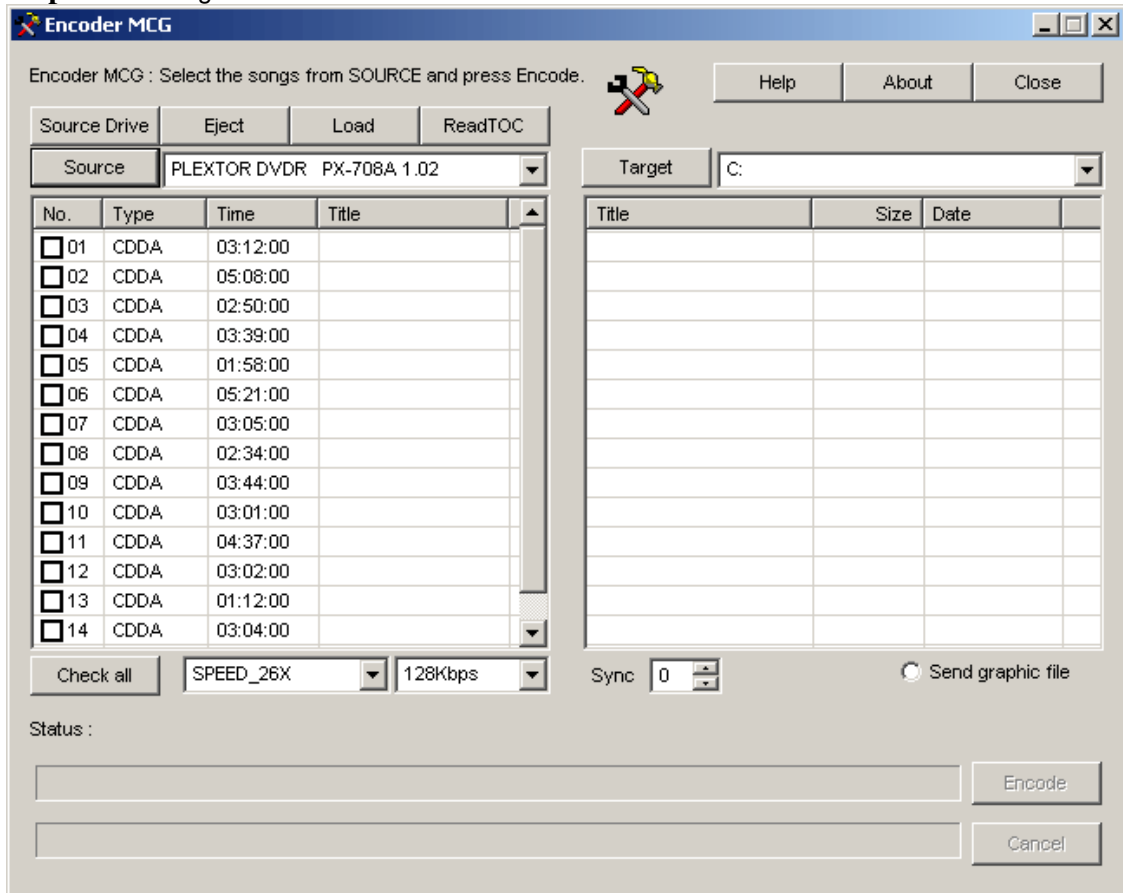


Step 4. (1) Check the songs you wish to extract from the CD+G disc. (2) Click on Target.

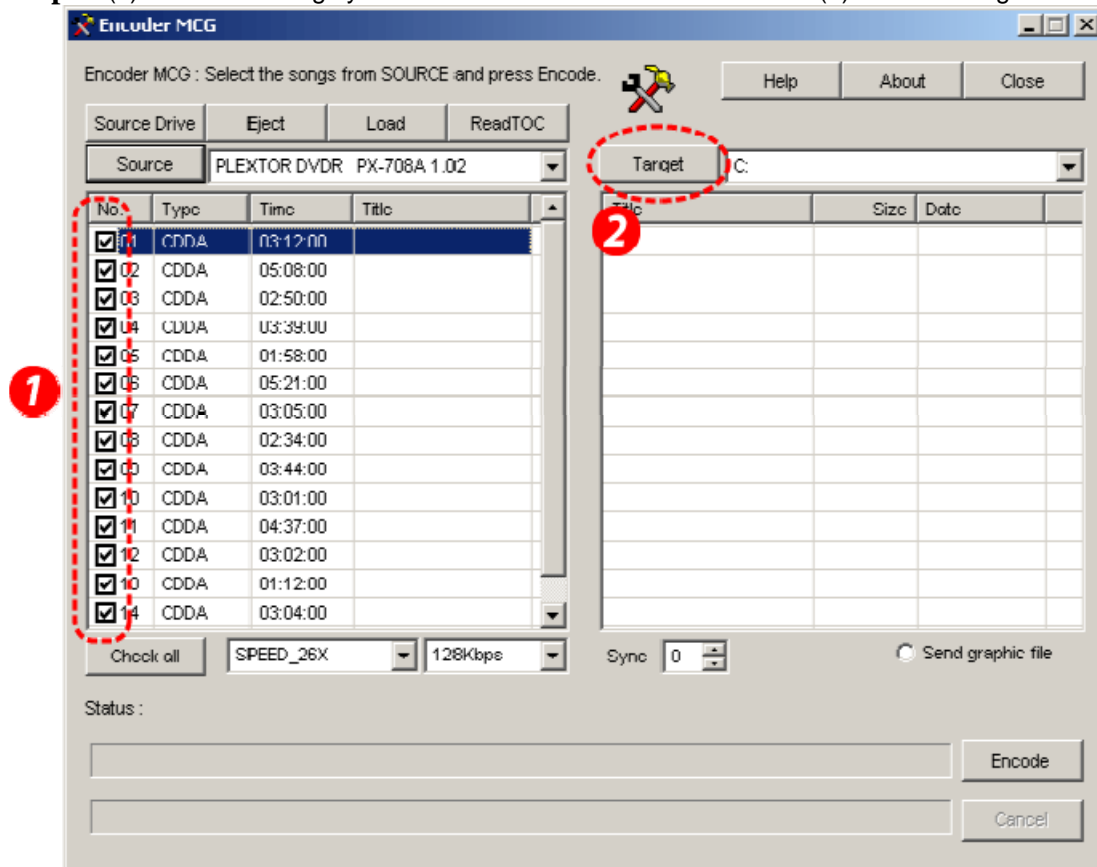


Step 5. Select the target folder into which you wish to store the extracted files.

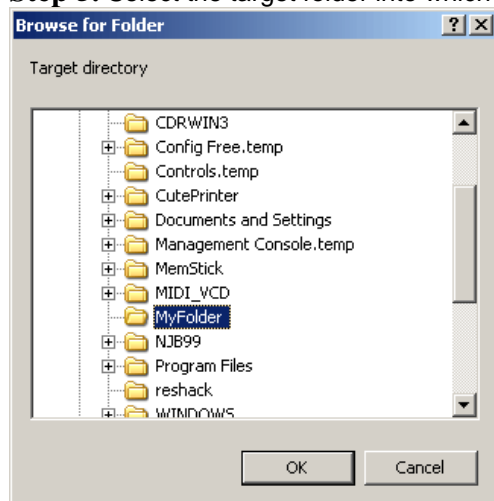

Step 6. (1) Make sure the target folder is updated. (2) Check the "Send graphic file". (3) Type in song titles. (4) Click on "Encode".

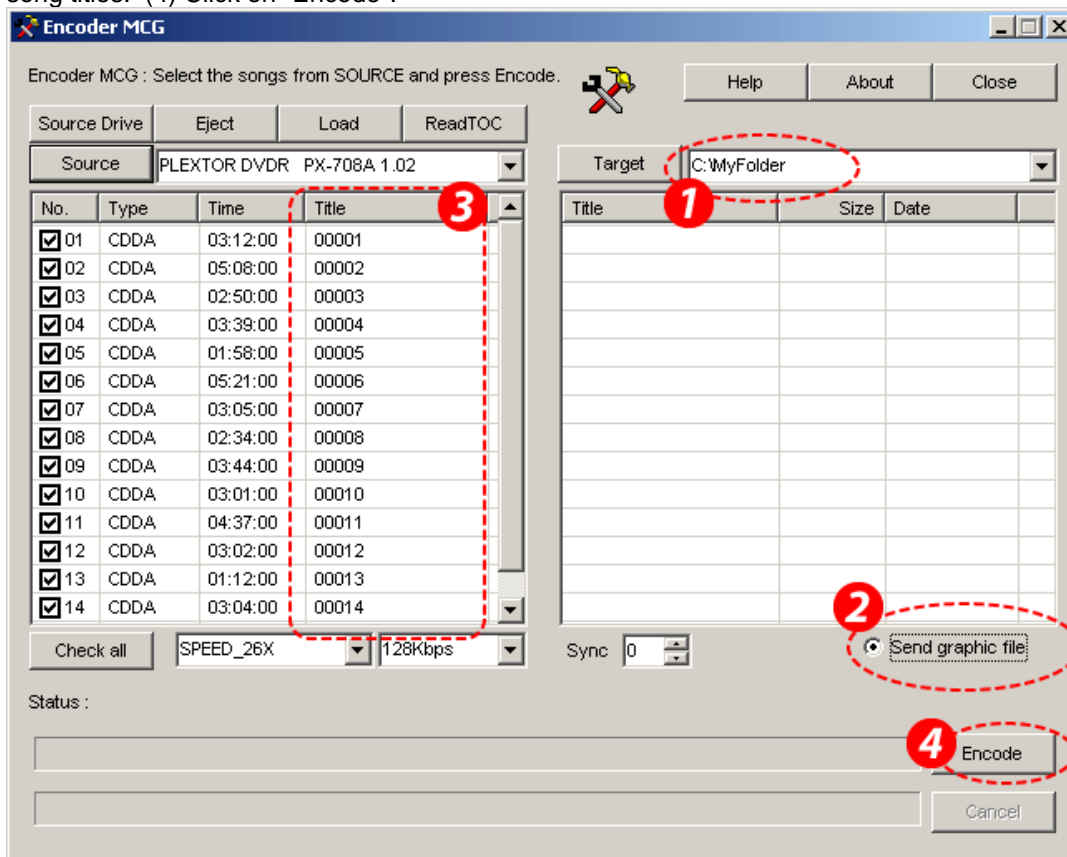


Step 7. Extraction will begin and the status will be shown as below.

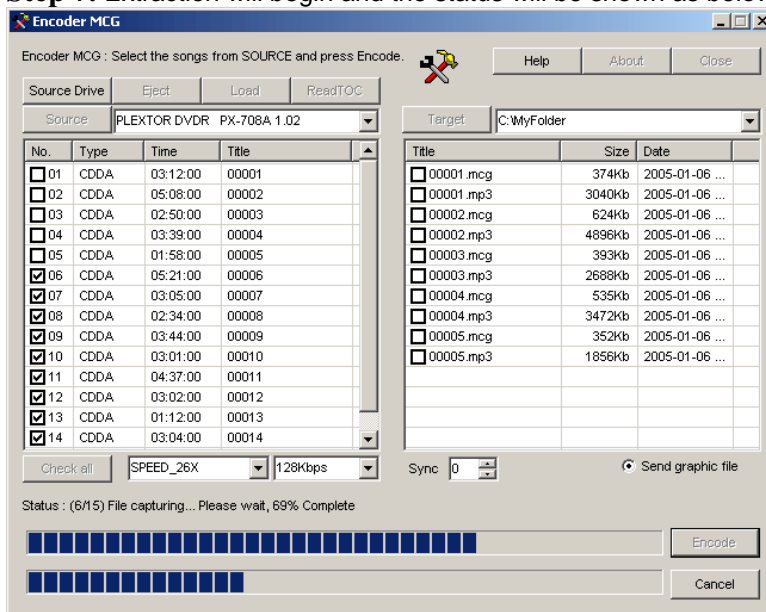

Step 8. When completed, click on "OK", and close the Encoder MCG program.



Step 9. Now your target folder should look as below:

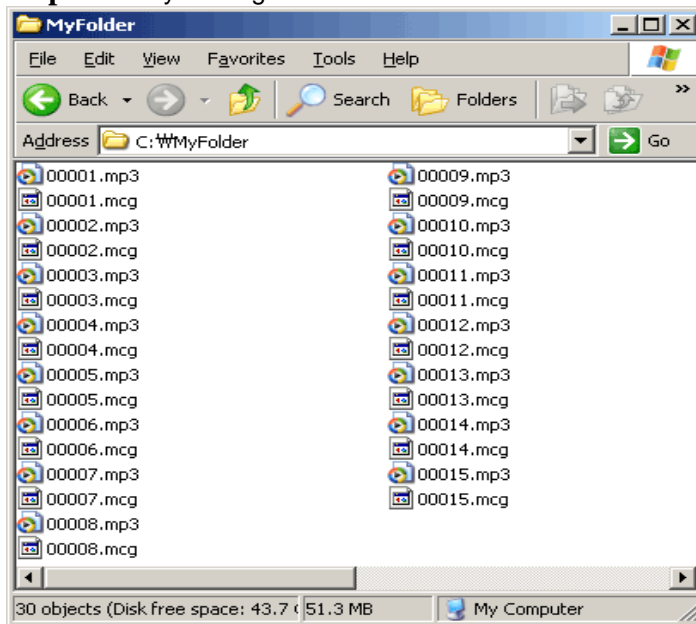


Note: Your Windows Explorer may not show the file extensions, such as mcg and mp3. Here is how you can fix it:

A. Click on "Tools" and select "Folder Options..." on your Windows Explorer.



B. (1) In Folder Options window, click on "View" tab. (2) **UNCHECK** "Hide extensions for known file types" option. (3) Click on "OK".

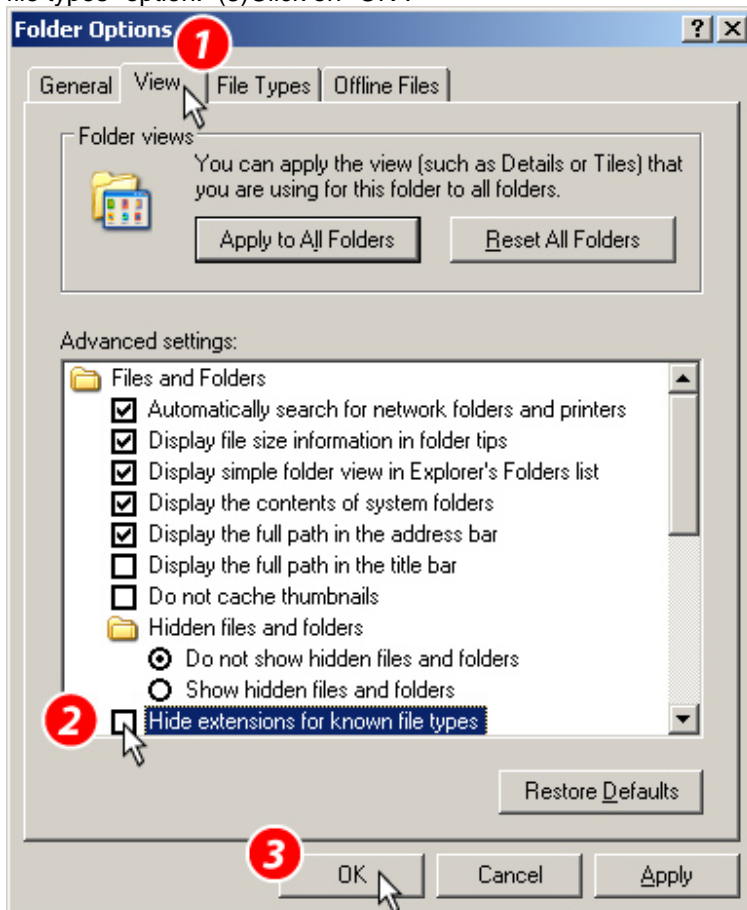

END