
CAVS IPS-11G Karaoke Station Quick Start Setup Guide



1. Accessories

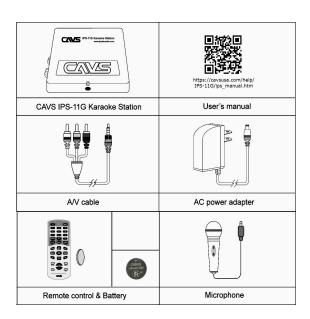

2. Power Supply

AC power adapter supports 100V~240V AC input voltage with DC 9V 1000 mA output.

To prevent any damage to the system, it is recommended only to use the included AC power supply adapter.

Be sure to connect the plwer supply plug into the DC input socket of the IPS-11G karaoke player as shown in the picture.




3. Audio Video Connection

Using the enclosed AV cable, connect the 3.5 mm jack end to the A/V output socket in the IPS-11G karaoke player.

Next connect the RCA (yellow, white, and red) connector end of the cable to the AV Input connector (yellow, white, red) of a TV.

If your TV has only a HDMI connector for input, you will need a "RCA to HDMI converter" such as many found online.


You can connect the Audio (white and red) connector to an external amplifier or mixer for better sound output.

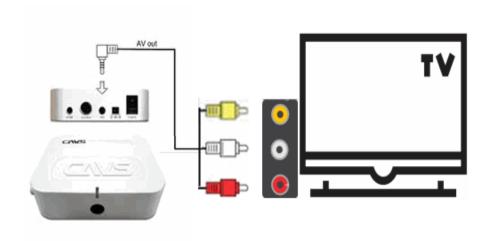

4. Remote Controller



Insert the enclosed battery into the battery compartment on the back of the Remote Controller. Be sure to confirm the direction of the battery adn the direction of insertion as below.

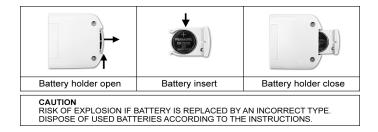

5. Power on

Press the Power button on the back panel of the IPS-11G karaoke player. The position "1" should be pressed. When not in use, turn off the POWER switch to "0" position.



Next using the Remote Controller, press the Power button on the top left corner while pointing the Remote Controller toward the IPS-11G karaoke player.



The power LED indicator on the IPS-11G karaoke player will come on showing the unit is turned on.




The initial screen of CAVS IPS-11G will appear with a message "NO MEDIA DETECTED" on the TV screen.



6. Microphone Connection

CAVS IPS-11G has a built-in dual microphone mixer with 3.5mm mini jack connectors for 2 microphones. Connect the microphones (one enclosed) into the mini jack connectors. Turn on the power switch located on the microphone handle.

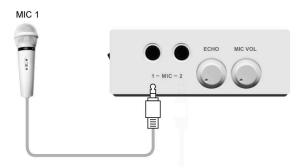

Adjust the microphone volume and echo level with MIC VOL and ECHO control knobs.

7. How to operate

Find enclosed a yellow envelope which contains a USB flash drive with karaoke songs. Insert the flash drive into the USB port of the IPS-11G karaoke player. The TV screen will change to the following display.



Using the Remote Controller, select a song number and press "Play/Enter" to play the song.

To find a song, press the "Search" button which will togle between Search by Title, Search by Artist, and Search Help.

This USB flash drive is a sample made using the IPS Manager program to load the karaoke songs of Super CD+G Vol 4.

There are many video, audio, and karaoke files that you can enjoy loading and playing in the IPS-11G karaoke player. For detailed description on how to operate each and enjoy the IPS-11G karaoke player, go to

- User Manual https://cavsusa.com/help/IPS-11G/ips_manual.htm
- IPS Manager Program https://cavsusa.com/ipsmanager/